

Cover lift Assembly for Covermate I (Hot Spring & Jacuzzi)

Installation Instructions

_____ Step #1 _____


Position the spa cover (in closed position) on the spa, making sure that all four corners are properly positioned and square on the spa.

_____ Step #2 _____

Using the #10x1 screws, attach the left and right Mounting Brackets to the appropriate sides of the spa.

CAUTION: To prevent spitting of wood cabinet, pre-drill holes with a 1/16" drill bit.

Mounting Height is optional (See Figure 1)

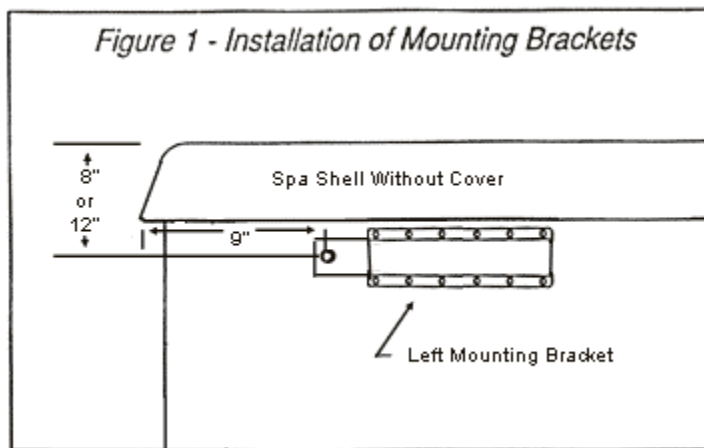


By positioning the brackets at 8" down from the top of the spa shell approximately 9" clearance behind the spa will be needed. Mounted at this position approximately 75 percent of the spa cover will be standing above the spa surface in the off position.

By positioning the brackets 12" down from the top of the spa shell approximately 15" clearance behind the spa will be needed. Mounted at this position approximately 50 percent of the spa cover will be standing above the spa surface in the off position.

_____ Step #3 _____


Connect the pivot arms to the mounting brackets. (See Figure 2)

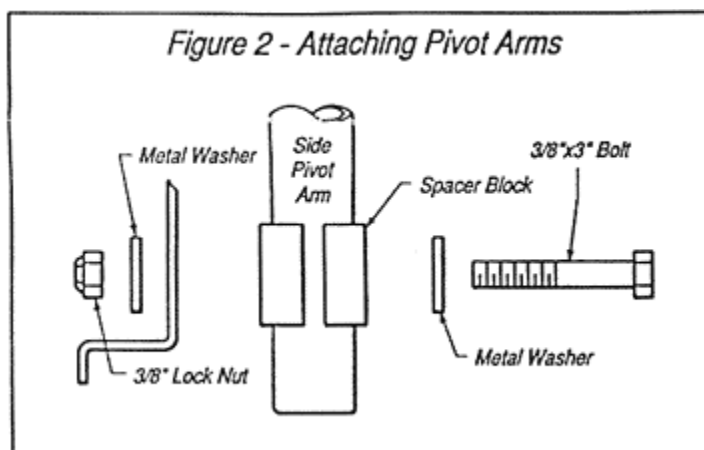

After pivot arms are connected tilt them back into the upright position.


Step #4

Insert the long end of the support arms into the center coupler piece then slide support arms into the pivot arms. (See Figure 3)

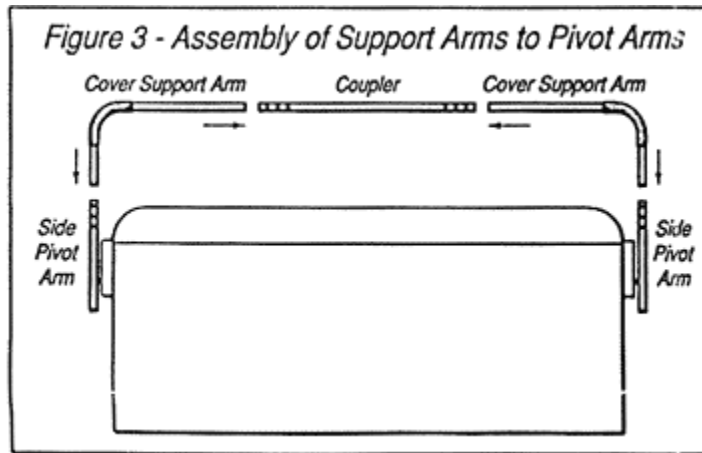

Step #5

Lay the Covermate on the spa cover and adjust the coupler piece and support arms so that the coupler piece is lying parallel to the spa cover's hinge about a 1/2" away. (See Figure 4)

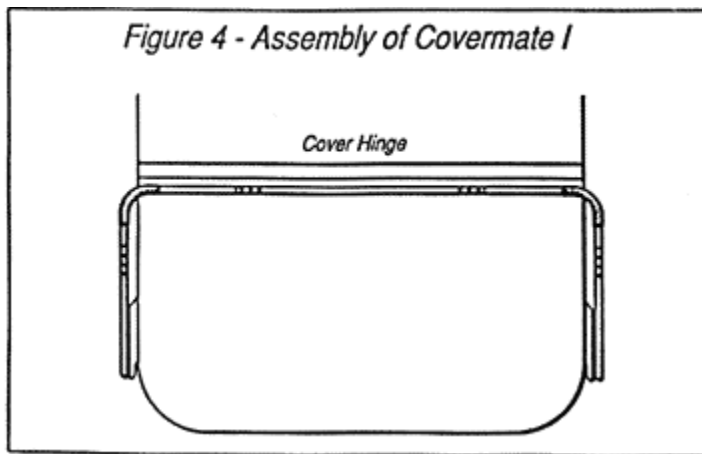

Using the #10 self-tapping screws fasten supports arms to the pivot arms and the coupler piece.

Note: Be sure to rotate the coupler piece so that the inserted screws are at a horizontal angle with the heads facing the back of the spa.

Step #6

Slip the black hand grips to the edge of the spa cover and snap black plastic screw head covers on and finally you are done and can enjoy your spa.